

3eBin™ - Gravity bin **disassembly** instructions

COMPONENT OVERVIEW:



Components:

1. Front	9. Bearings (2 pcs)
2. Left bin body	10. Plugs (2 pcs)
3. Right bin body	11. Sleeve
4. Label holder	12. Handle
5. Springs (2 pcs)	13. Shutter seal
6. Clip	14. Shutter
7. Shutter stop	15. Top lid
8. Flow control	

3eBin™ - Gravity bin disassembly instructions


PLEASE FOLLOW THE BELOW INSTRUCTIONS FOR ASSEMBLY OF YOUR GRAVITY BIN:



1. Remove top lid from bin body.



2. Press bin front's latches one at the time to separate front from bin body. Remove bin front.

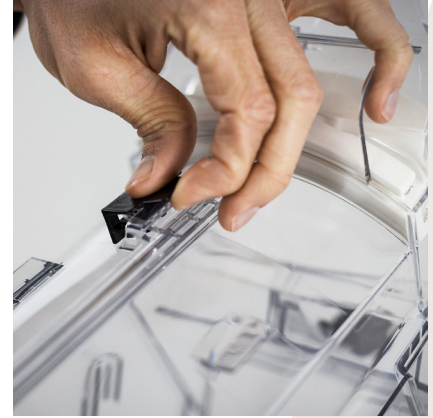

3. Remove clip - lift its fly upwards while pushing clip to the right.



4 a. Turn bin around.



4 b. Disconnect the two halves of the bin body by pressing the two front latches while pulling the two halves away from each other.



4 c. Repeat this procedure with the latch on the back of the bin.



4 d. When disconnecting the bin body halves, the shutter seal will come off as well.

3eBin™ - Gravity bin disassembly instructions



5. Make the bin stand with flow control towards you. Press encircled part to the left while sliding flow control towards you until it comes off.



6. Place bin front on the side and unplug plugs. Press the plug downwards, and from the inside, pinch the two extremities of plug inwards.



7. When the two extremities are pinched to the fullest extent, the plug exits its hole and the handle comes off.



8. Turn bin front around and pull off the two springs from their respective hooks.



9. Disconnect shutter from bin front by pushing the encircled narrow circle towards the inside of bin front.



10. Remove both bearings from shutter's protruding circles.



11. Remove both springs from shutter's small pegs by gently pulling them off.



12. Returning to the bin front, turn it around and remove label holder.



13. Remove anti-slip gasket by pushing it off.